PUMPS & CONTROLS

UFH Manifold Blending Valve Pump Pack 20 to 55°C with Bastion A-Rated 6m Pump

Bastion 6m pump, 20 to 55°C.

A pre-assembled blending valve pump pack with a Bastion A-rated 6m-head circulator and its power cable, for standard-sized UFH systems on one manifold. The wax-capsule valve blends primary flow with return water to give a steady 20 to 55°C.

CODE

MH-BV55-BAS6

PRODUCT



01 · IN THE BOX

What you get

- Pre-assembled valve and pump unit
- Mixed flow temperature gauge, fitted
- Loose flow / return elbow
- Pump power cable

02 · YOU WILL NEED

Tools and materials

- 37mm A/F and 31mm A/F spanners
- Spanners for 3/4" fittings
- Digital thermometer
- Pressure test pump

03 · SAFETY

Before you start

- Isolate the electrical supply before working on a pump, actuator or valve head. A qualified electrician makes the final connection, to BS 7671.
- Close the isolating valves or drain down, and release the pressure, before opening any joint.
- Pumps, valves and pipework can be hot. Let the system cool before you handle them.

04 · INSTALLATION

Fit it in 8 steps.

1. **Unpack and check every part is there and undamaged.** Decide which side of the manifold the pack will sit.
2. **The pack is set up for the right-hand side of the manifold.** For the left side, move the valve swivel nut across and turn the elbows 180° on the pump nuts, then retighten.
3. Fit the loose elbow on the flow or return so the primary pipes can come in from the side or from below.
4. Screw the 1" swivel joints evenly into the manifold's 1" female tappings with a 37mm spanner, holding the pack with a 31mm spanner. The O-rings seal, so do not overtighten.
5. Fix the manifold and pack firmly to the wall.
6. **Connect the primary flow to H and the return to R (3/4" female).** Fit ball valves on both so the pack can be isolated.
7. A qualified electrician connects the pump to the heating controls, to BS 7671.
8. Fill from the fill valve on the upper (flow) manifold bar, vent, then set the dial and the pump setting.

05 · TESTING AND COMMISSIONING

Test, check, then hand over

- [x] Check every joint before filling, as nuts can loosen in transit. Pressure test with the manifold to BS EN 1264-4.
- [x] Run the system and check the gauge against the dial setting with a digital thermometer.

06 · CARE AND MAINTENANCE

Keep it working

- Check the mixed flow temperature and system pressure yearly.

07 · BLENDING VALVE DIAL

SETTING	1	2	3	4	5	6
Mixed flow	20°C	27°C	34°C	41°C	48°C	55°C

Set the dial to suit the floor build and the system design.

08 · QUESTIONS

Asked by installers

Does the blending valve need wiring?


No. It's a thermostatic wax-capsule valve, so only the pump needs power.

6m or 7.5m?

The 6m suits most single-manifold jobs. Go for the 7.5m version if the system is large or the loops are long.

09 · WORKS WITH

Parts that fit with it

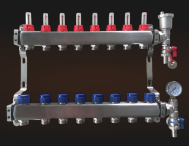

Dualmix Stainless Steel Manifold Assembly



3/4" Ball Valve Set for Blending Valve



Bastion Replacement Pump Cables



Blending Valve Pump Pack with Bastion 7.5m Pump for bigger systems

ALSO WORKS WITH

Blending Valve Pump Pack with Bastion 7.5m Pump

SCAN ME

Watch how it works and fits

Point your phone camera at the code to watch the video.

QUESTIONS ON SITE?

sales@maxheatufh.com **07539 499069**

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery