UFH PANELS & BOARDS


6mm Foil-Backed Fibre Top Board for Routed Chipboard UFH

Cover board for routed chipboard UFH, 1200 x 600mm.

A 6mm moisture-resistant fibre cover board that goes over 22mm routed chipboard panels once the pipe is in. The 150 micron foil backing spreads heat from the pipe across the floor and the board gives a flat base for the floor finish.

CODE

MH-TOPBOARD-6

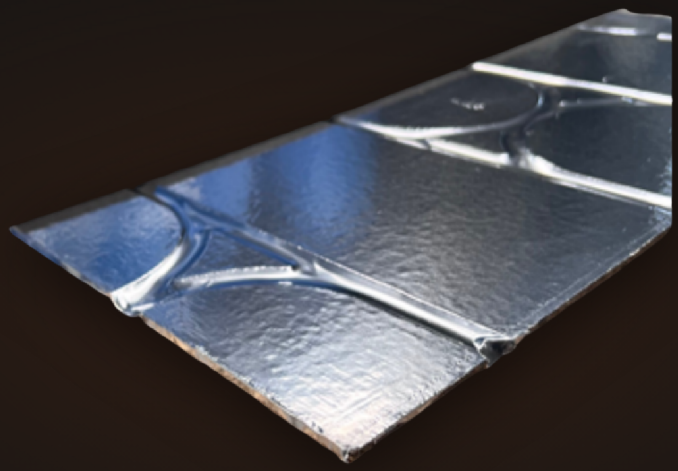

01 · KEY FEATURES

Why installers use it

- **150 micron foil backing.** Spreads heat from the pipe across the whole floor.
- **Moisture-resistant.** 6mm moisture-resistant fibre board.
- **Flat and stable.** A level base for the floor finish over routed chipboard.
- **Made for joisted and timber floors.** Use it over routed chipboard systems such as MaxHeatChip.

IN THE BOX

6mm top boards, 1200 x 600mm

02 · SPECIFICATION

Technical data

Thickness	6mm
Board size	1200 x 600mm
Backing	150 micron aluminium foil
Board	Moisture-resistant fibre board
Fixing	4 x 20mm chipboard screws
Code	MH-TOPBOARD-6

03 · DESIGN HELP

Send us your plans

For design help, send your plans to **sales@maxheatufh.com** or plan loops with **MaxHeatUFH ProLoop** at maxheatufh.com.

04 · ORDER CODE

MH-TOPBOARD-6.


One code for this product. Check the specification on page 1 before you order.

05 · WORKS WITH

Complete the system



MaxHeatChip 22mm Grooved Chipboard Panel

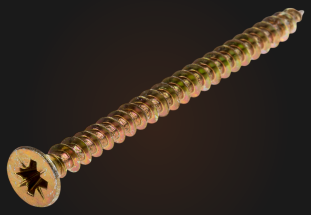

Chipboard Screws for UFH Panels (4 x 20mm for top boards)

ALSO WORKS WITH

Joisted floor systems

06 · FITTING AT A GLANCE

Full steps in the install manual

1. Pressure test the pipe in the chipboard panels before covering it.
2. Lay the boards foil side down, facing the pipe and chipboard.
3. Stagger the joints so they do not line up with the joints in the chipboard below.
4. Screw the boards to the chipboard with 4 x 20mm screws, keeping well away from the pipe runs.

07 · QUESTIONS

Asked by installers

Which way up does it go?

Foil side down, facing the pipe and chipboard. The foil spreads the heat from the pipe below.

How do I fix it?

Screw it to the chipboard, staggering the joints and keeping the screws away from the pipe runs. Our 4 x 20mm chipboard screws are sized for this.

08 · GOOD TO KNOW

Fitting tips

Stagger the joints so they don't line up with the joints in the chipboard below. Fix with screws, keeping well away from the pipe runs.

SCAN ME

Watch how it works and fits

Point your phone camera at the code to watch the video for this product.

DESIGN HELP, TRADE ACCOUNTS AND ORDERS

sales@maxheatufh.com

07539 499069

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery