
6mm Foil-Backed Fibre Top Board

Cover board for routed chipboard UFH, 1200 x 600mm

Code: MH-TOPBOARD-6

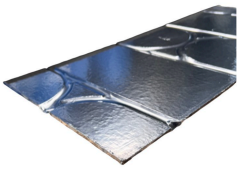

In the box

- 6mm top boards, 1200 x 600mm

You will need

- Saw or knife and straight edge
- Screwdriver
- 4 x 20mm chipboard screws
- Pencil to mark pipe runs

Safety

- Installation should be carried out by a competent installer, in line with the system design and BS EN 1264.
- Wear a dust mask and eye protection when cutting boards, and gloves when handling adhesives, primers and compounds.
- Follow the instructions and safety data sheets for every primer, adhesive and levelling compound used with the system.

Installation

1. Pressure test the pipe in the chipboard panels before covering it.
2. Lay the boards foil side down, facing the pipe and chipboard.
3. Stagger the joints so they do not line up with the joints in the chipboard below.
4. Screw the boards to the chipboard with 4 x 20mm screws, keeping well away from the pipe runs.
5. Mark where the pipes run so the flooring fitter does not fix through them.

Testing and commissioning

- ✓ Check the system holds pressure after the boards are fixed.

Care and maintenance

- Keep all floor-finish fixings clear of the marked pipe runs.