UFH PANELS & BOARDS

6mm Foil-Backed Fibre Top Board for Routed Chipboard UFH


Cover board for routed chipboard UFH, 1200 x 600mm.

A 6mm moisture-resistant fibre cover board that goes over 22mm routed chipboard panels once the pipe is in. The 150 micron foil backing spreads heat from the pipe across the floor and the board gives a flat base for the floor finish.

CODE

MH-TOPBOARD-6

PRODUCT

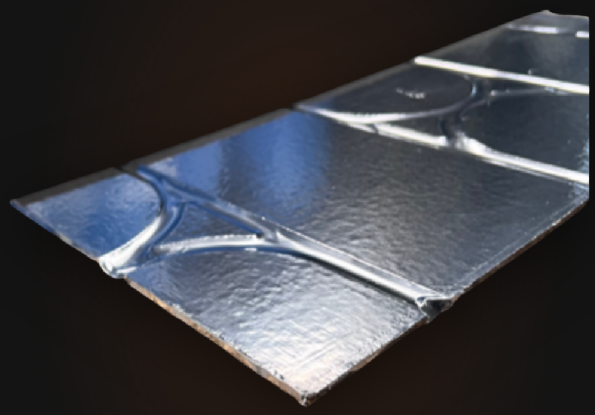

01 · IN THE BOX

What you get

- 6mm top boards, 1200 x 600mm

02 · YOU WILL NEED

Tools and materials

- Saw or knife and straight edge
- Screwdriver
- 4 x 20mm chipboard screws
- Pencil to mark pipe runs

03 · SAFETY

Before you start

- Installation should be carried out by a competent installer, in line with the system design and BS EN 1264.
- Wear a dust mask and eye protection when cutting boards, and gloves when handling adhesives, primers and compounds.
- Follow the instructions and safety data sheets for every primer, adhesive and levelling compound used with the system.

04 · INSTALLATION

Fit it in 5 steps.

1. Pressure test the pipe in the chipboard panels before covering it.
2. Lay the boards foil side down, facing the pipe and chipboard.
3. Stagger the joints so they do not line up with the joints in the chipboard below.
4. Screw the boards to the chipboard with 4 x 20mm screws, keeping well away from the pipe runs.
5. Mark where the pipes run so the flooring fitter does not fix through them.

05 · TESTING AND COMMISSIONING

Test, check, then hand over

- [x] Check the system holds pressure after the boards are fixed.

06 · CARE AND MAINTENANCE

Keep it working

- Keep all floor-finish fixings clear of the marked pipe runs.

07 · GOOD TO KNOW

Fitting tips

Stagger the joints so they don't line up with the joints in the chipboard below. Fix with screws, keeping well away from the pipe runs.

08 · QUESTIONS

Asked by installers

Which way up does it go?

Foil side down, facing the pipe and chipboard. The foil spreads the heat from the pipe below.

How do I fix it?


Screw it to the chipboard, staggering the joints and keeping the screws away from the pipe runs. Our 4 x 20mm chipboard screws are sized for this.

09 · WORKS WITH

Parts that fit with it



MaxHeatChip 22mm Grooved Chipboard Panel

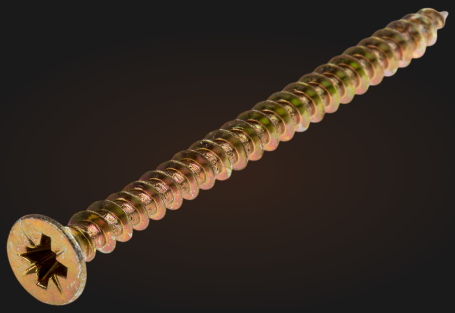

Chipboard Screws for UFH Panels (4 x 20mm for top boards)

ALSO WORKS WITH

Joisted floor systems

SCAN ME

Watch how it works and fits

Point your phone camera at the code to watch the video.

QUESTIONS ON SITE?

sales@maxheatufh.com **07539 499069**

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery