
INSULATION

# Edge Insulation Foam Roll 100mm x 5mm
# Perimeter expansion strip for screeds.

A 100mm x 5mm closed-cell polyethylene foam strip for wet underfloor heating. Fix it around the room and any columns before screeding. It takes up screed expansion and stops heat escaping into the walls.

CODES

**MH-EDGE-25M, MH-EDGE-50M**

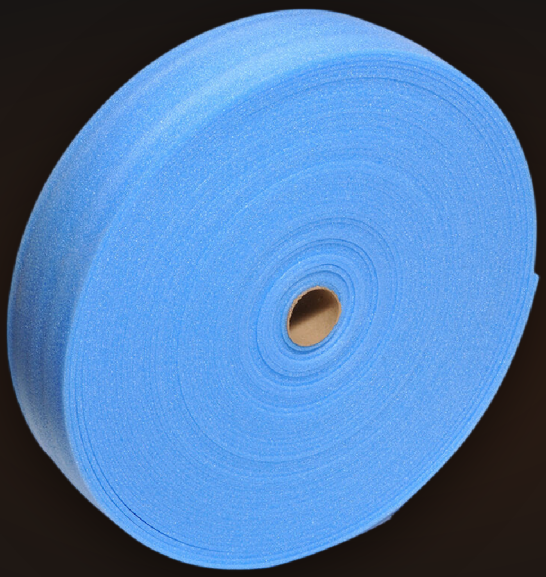

01 · KEY FEATURES

## Why installers use it

- **Takes up expansion.** Gives the screed room to move as it heats and cools.
- **Cuts heat loss.** Stops heat leaking sideways into the walls.
- **Closed-cell PE foam.** 100mm x 5mm strip.
- **Two roll lengths.** 25m for a room, 50m for bigger floors or several rooms.

IN THE BOX

1 roll of edge strip

02 · SPECIFICATION

## Technical data

| | |
|---|---|
| Strip | 100mm high x 5mm thick |
| Material | Closed-cell PE foam |
| Rolls | 25m, 50m |

03 · QUESTIONS

## Asked by installers

**When do I fit it?**

Before screeding. Fix it around the room perimeter and around columns, then lay the floor.

**What happens to the strip above the floor?**

Once the screed is down, trim the excess flush with the floor finish.

04 · SIZES AND CODES


# Pick the size, one code each.

2 options by length. Order by code.

| LENGTH | CODE |
|---|---|
| 25m | MH-EDGE-25M |
| 50m | MH-EDGE-50M |

05 · WORKS WITH


## Complete the system

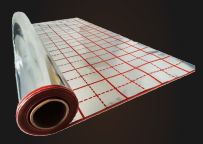

Underfloor Heating Grid Membrane



High Grip Barbed Pipe Clips

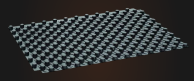

Castellated Floor Panel 1220 x 820mm

ALSO WORKS WITH

Insulation boards

06 · FITTING AT A GLANCE

## Full steps in the install manual

1. Measure the perimeter of each room plus around any columns.
2. Lay the floor insulation first, then fit the strip on top, tight to the walls and round columns.
3. Keep it tight, so it stands proud of the finished screed.
4. Where large and small areas meet, and at doorways where pipes pass through, form an expansion joint from a length of strip, and sleeve pipes 300mm each side.

07 · GOOD TO KNOW

## How much do I need?

Measure the perimeter of each room, plus around any columns, and add the lengths together. After screeding, trim the excess flush with the floor finish.

08 · DESIGN HELP

## Send us your plans

For design help, send your plans to **sales@maxheatufh.com** or plan loops with **MaxHeatUFH ProLoop** at maxheatufh.com.

SCAN ME

## Watch how it works and fits

Point your phone camera at the code to watch the video for this product.

DESIGN HELP, TRADE ACCOUNTS AND ORDERS

**sales@maxheatufh.com** **07539 499069**

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery