FIXINGS

Overlay Panel Washers

Load-spreading washers for overlay boards.

Washers for fixing underfloor heating overlay panels, 100 to a pack. Fit one under each screw head so the screw holds the board firmly without pulling through.

CODE

MH-WSH

PRODUCT



01 · IN THE BOX

What you get

- 100 washers

02 · YOU WILL NEED

Tools and materials

- Cordless driver
- Screws to suit the subfloor

03 · SAFETY

Before you start

- Installation should be carried out by a competent installer, in line with the system design and BS EN 1264.
- Wear gloves and eye protection when cutting pipe, handling metal plates or using hand tools.
- Release system pressure and let pipework cool before cutting into or disturbing any filled pipe.

04 · INSTALLATION

Fit it in 4 steps.

1. Lay the overlay boards as designed.
2. Put a washer on each screw.
3. Drive the screw through the board until the washer sits flat and firm. Do not crush the board.
4. Keep fixings clear of the pipe grooves.

05 · TESTING AND COMMISSIONING

Test, check, then hand over

- [x] Check each board is firm with no rocking before laying the pipe.

06 · QUESTIONS

Asked by installers

How many are in a pack?


100 washers.

What are they used for?

Fixing overlay underfloor heating panels. Put one under each screw head.

07 · WORKS WITH

Parts that fit with it

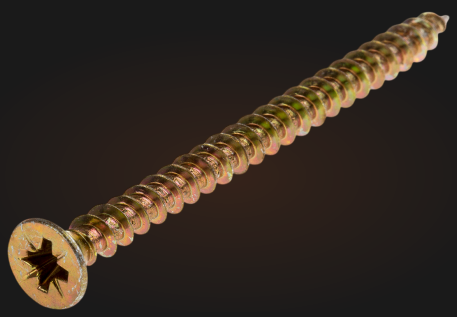

Chipboard Screws for UFH Panels



MaxHeatPanel Routed XPS Board

ALSO WORKS WITH

Overlay boards

08 · JOB RECORD

Fill in on site, keep for the handover

Site / room

Installed by

Date

Test result

Notes

SCAN ME

Watch how it works and fits

Point your phone camera at the code to watch the video.

QUESTIONS ON SITE?

sales@maxheatufh.com **07539 499069**

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery