ELECTRIC UNDERFLOOR HEATING


Uncoupling / Decoupling Membrane for Electric Underfloor Heating

Tile protection over electric heating.

An uncoupling membrane for tiled floors over electric underfloor heating. It separates the tiles from movement in timber, new screed or mixed subfloors, helping stop cracked tiles and grout, and spreads the load over the heating cable.

CODES

MH-DCM-1x5 to MH-DCM-1x15

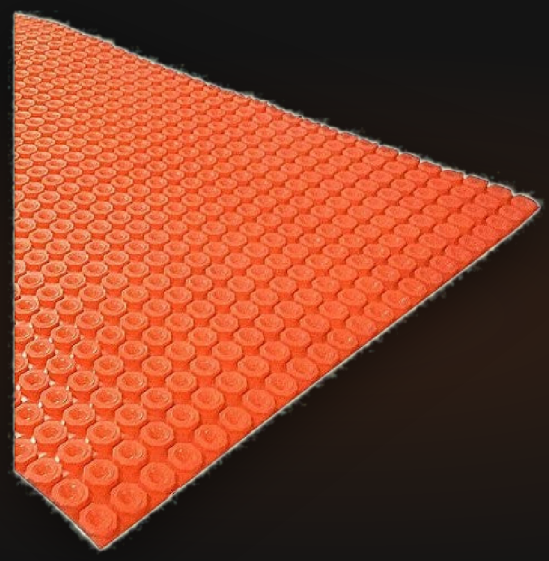

01 · KEY FEATURES

Why installers use it

- **Holds the cable.** The studs grip the loose cable and set the spacing between runs.
- **Protects the tiles.** Takes up subfloor movement before it reaches the tiles and grout.
- **Fleece backed.** Bed it into flexible tile adhesive, then tile on top with flexible adhesive.
- **Easy to handle.** Lightweight and cuts with a knife.

IN THE BOX

1 roll of membrane

3	1 m	1 m²
SIZES AVAILABLE	WIDTH	COVERAGE, PER METRE OF ROLL

02 · SPECIFICATION

Technical data

Width	1m
Roll lengths	5m, 10m and 15m
Coverage	1m² per metre of roll
Backing	Fleece
Bedding and tiling	Flexible tile adhesive
Subfloors	Timber, new screed or mixed substrates
Use with	Electric heating mats and loose cable

03 · QUESTIONS

Asked by installers

Do I need it with an electric heating mat?

No. Mats come on their own mesh and go straight into the tile adhesive bed. The membrane is for loose cable.

Which adhesive should I use?

Flexible tile adhesive, both to bed the membrane and to fix the tiles on top.

04 · SIZES AND CODES

Pick the size, one code each.

3 options by size. Order by code.


SIZE	CODE
1m x 5m (5m²)	MH-DCM-1x5
1m x 10m (10m²)	MH-DCM-1x10
1m x 15m (15m²)	MH-DCM-1x15

05 · ROLL SIZES

ROLL	COVERAGE
1m x 5m	5m²
1m x 10m	10m²
1m x 15m	15m²

06 · WORKS WITH

Complete the system



MaxHeatUFH Loose Heating Cable, 10W/m or 20W/m



Ultra Prime It Multi-Surface Primer

ALSO WORKS WITH

- MaxHeatUFH Loose Heating Cable
- MaxHeatUFH 150W/m² Electric Heating Mat

07 · FITTING AT A GLANCE

Full steps in the install manual

1. Measure the floor area to be tiled and pick a roll that covers it, with a little extra for cuts.
2. Check the subfloor is solid and clean. Prime it if your adhesive needs it.
3. Cut the membrane to length with a sharp knife.
4. Spread flexible tile adhesive and bed the fleece side into it, pressing it down for full contact.

08 · GOOD TO KNOW

How much do I need?

Each metre of roll covers 1m². Measure the floor area to be tiled and choose the roll that covers it, allowing a little extra for cuts.

09 · DESIGN HELP

Send us your plans

For design help, send your plans to **sales@maxheatufh.com** or plan loops with **MaxHeatUFH ProLoop** at maxheatufh.com.

SCAN ME

Watch how it works and fits

Point your phone camera at the code to watch the video for this product.

DESIGN HELP, TRADE ACCOUNTS AND ORDERS

sales@maxheatufh.com **07539 499069**

WEB
maxheatufh.com

DELIVERY
Order by 12pm for next working day delivery